


REVISIONS			
REV.	DESCRIPTION	DATE	APRVD

Compartment door rods are adjusted at the factory to seal out weather, through normal usage the door rods may need readjusting to halt any water that may be entering.

To make this adjustment open the door and fully extend the door rods.

Support the door rod between the rod guide and latch and with an adjustable wrench, gently bend the end of the rod towards the door to tighten door seal, bend away from the door to loosen. Use the same procedure for the top side of the door. Adjust so that door will seal firmly.

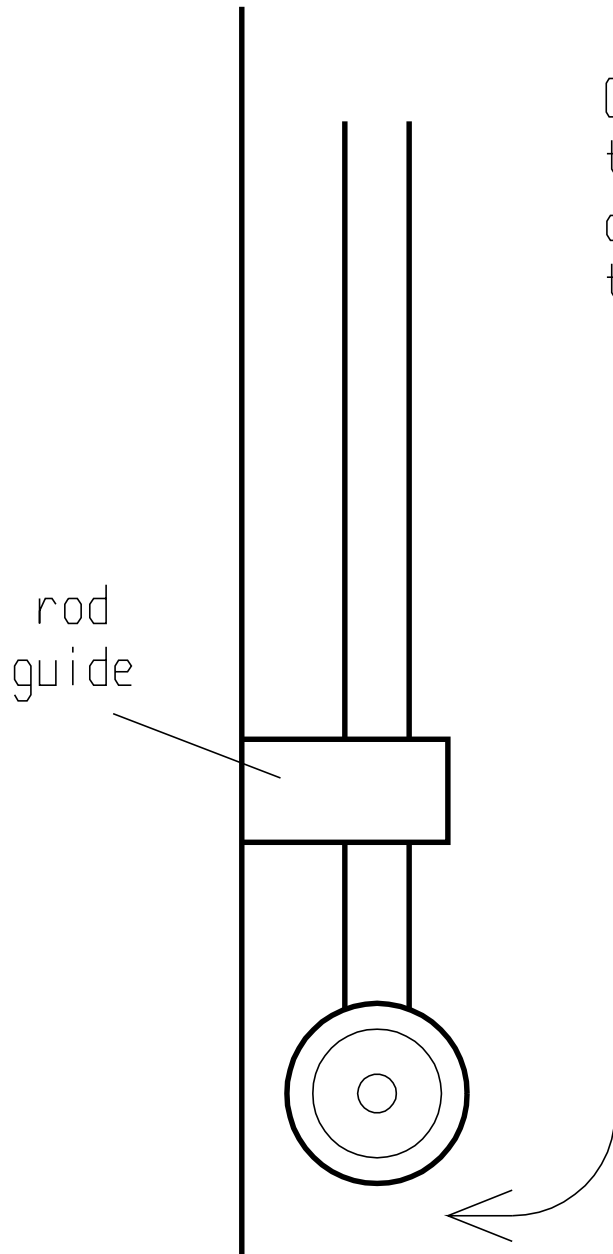

EDGE VIEW OF COMPARTMENT DOOR

PLEASE REPORT ANY ERRORS FOUND ON THIS PRINT  
THIS PRINT CONTAINS CONFIDENTIAL INFORMATION AND IS THE SOLE PROPERTY OF MAINTAINER CORP. OF IOWA INC. AND IS NOT TO BE COPIED OR REPRODUCED WITHOUT THE EXPRESSED WRITTEN PERMISSION OF MAINTAINER CORP. OF IOWA, INC.

PROPRIETARY DATA PROPERTY OF MAINTAINER CORPORATION OF IOWA, INC.			COPYRIGHT © 1995	
UNOS DIMENSIONS ARE IN INCHES GENERAL TOLERANCES		MATERIAL: _____		
BREAK ALL EDGES .01 X 45°	ANGULAR ± 1° .XX ± .03 .XXX ± .005	SCALE: _____	SIZE: A	
UNOS RADII _____	UNOS ANGLES _____	DRAWING NUMBER: DOOR2	DFTM. KLV	DATE: 10/31/06
MADE IN THE USA		Compartment door adjustment		

**Thaintainer**  
Corporation of Iowa, Inc.  
P.O. Box 349 1701 S. 2nd Avenue  
Sheldon, Iowa 51201